



 $Phenolic Ultimate Privacy \\ ^{\mathsf{T}} shown in Floor Anchored / Overhead Braced.$

PHENOLIC ULTIMATE PRIVACY™ PARTITIONS

Introducing the new Phenolic Ultimate Privacy™ Partitions. The elegance, design flexibility, and durability of Phenolic is now offered in ASI's Ultimate Privacy™ configuration.

Self-Closing routed doors overlap to remove any sightlines into the stall to ensure privacy. Door hinges and latch are not visible on the outside* creating a more visually appealing design. An occupancy latch with emergency access capability indicates when cubicle is occupied.

Doors can be 72" high and mounted as low as 6" above the finish floor for added privacy. ADA compliance can be easily achieved with appropriate depth and width or alternate mounting heights. Partitions are available in a full color spectrum.

*on inswing doors.

WHAT MAKES PHENOLIC ULTIMATE PRIVACY PARTITIONS UNIQUE:



FLUSH FINISH SELF-CLOSING DOORS

All of our self-closing doors and pilasters meet in a flush finish with routed, overlapping closures for guaranteed privacy.



EASY-STALL SHOE

Easy adjusted leveling bolt for floor anchored or overhead braced applications.



OCCUPANCY INDICATOR

Occupancy latch with an emergency unlatching device indicates when stall is occupied.



NEW PHENOLIC ULTIMATE PRIVACY™ PARTITIONS

Material	System	Mounting	Door & Panel HeightMounting Height	Privacy Construction
Phenolic	Ultimate Privacy [™]	 Floor Mounted Overhead Braced Floor Mounted Floor to Ceiling Ceiling Hung 	58" Doors and Panels12" Above Finished Floor	Doors & Pilasters interlock with Zero-Sightline™ routed edges.** Panels are attached to Pilasters and to the wall using Continuous Brackets.
	Ultimate Privacy [™] -64		64" Doors and Panels6" or 9" Above Finished Floor	
	Ultimate Privacy [™] -72	Floor Mounted Overhead BracedFloor to Ceiling	72" Doors and Panels6" or 9" Above Finished Floor	


^{**}Optional privacy construction includes a Continuous Strike Keeper, a continuous hinge.



ADA Compliance for Extra Height Stalls: For stalls to be ADA compliant they must be configured differently allowing for toe clearance under the panels and doors. This can be achieved by adding depth and width to the stall, or by mounting doors and panels at least 9" off the finished floor.

Please follow all ADA guidelines, making sure to also consider any local requirements.

PHENOLIC COLOR-THRU

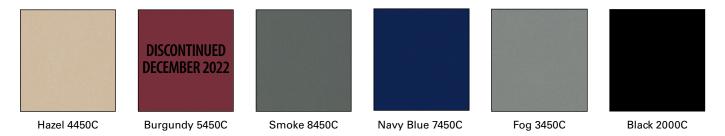

PHENOLIC BLACK CORE



Actual colors may vary slightly from those shown due to limitations in the printing process. Colors subject to change without notice.



ASI Global Partitions 900 Clary Connector Eastanollee, Georgia 30538 Phone: 706.827.2700 Fax: 706.827.2710

Web: asi-globalpartitions.com